

River Modelling

In this guide, we introduce 1D river modelling. You will load a river network and learn how to setup and run 1D simulations. We will explore a selection of the multiple ways Flood Modeller allows us to visualise the results from this.

Introduction

In this guide, we will look at loading an existing 1D river network into Flood Modeller, running a simulation and viewing the results from this.

We assume (and highly recommend!) readers of this guide have previously completed ['Getting Started – Essentials'](#), however the guide can still be followed without having done so.

Please note that there are a variety of ways to undertake different tasks in Flood Modeller. Throughout this guide, we provide details of selected methods only.

We will use data contained in the RiverModelling folder for this tutorial, which can be found within the GettingStartedData folder. [Access this here](#) if needed.


Tip: We recommend reading the entirety of each instruction, including the labels on the image provided, before carrying out each step.

Let's get going!

Step 1

Initially open Flood Modeller (or start a new project if already open).

A project file references all the different parts of the model – you might refer to multiple network files and simulation files, among other file types, all within a single project.

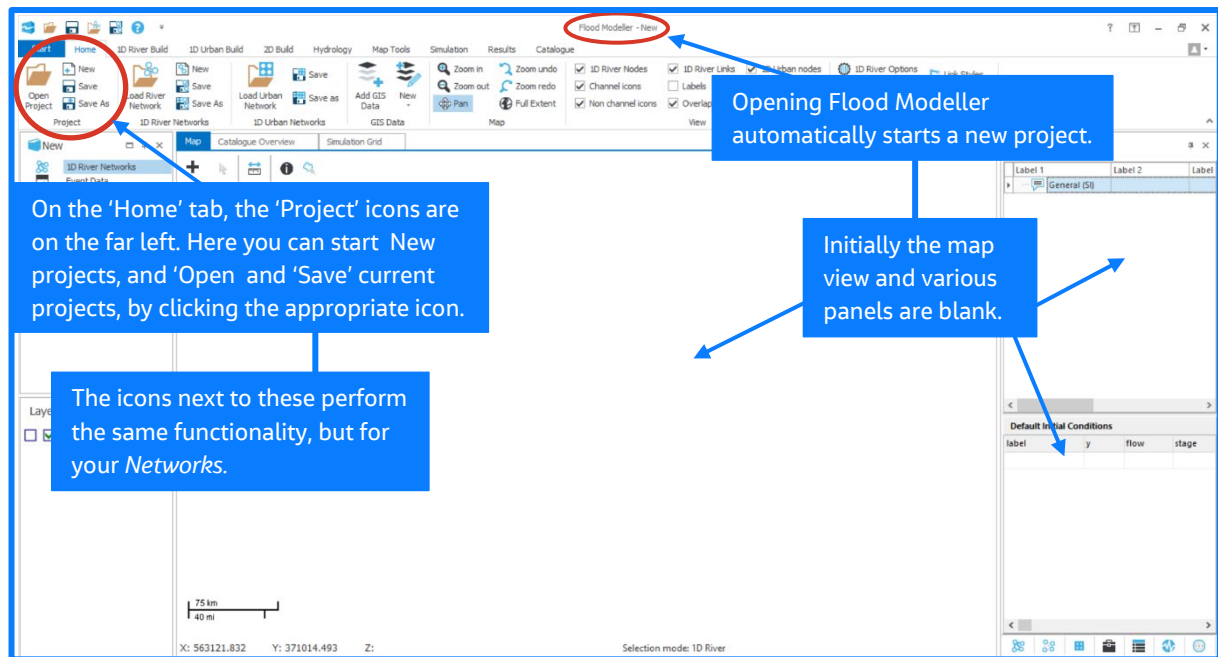


Step 2

Let's add a background map and save the project before progressing.

Background mapping is for visualisation only and is not used as part of the calculations.

Flood Modeller will automatically select the default projection specified in the 'Application Settings' window, which will be set at OSGB 1936 as needed (unless you have changed your default projection, in which case you will want to adjust the projection for this tutorial).

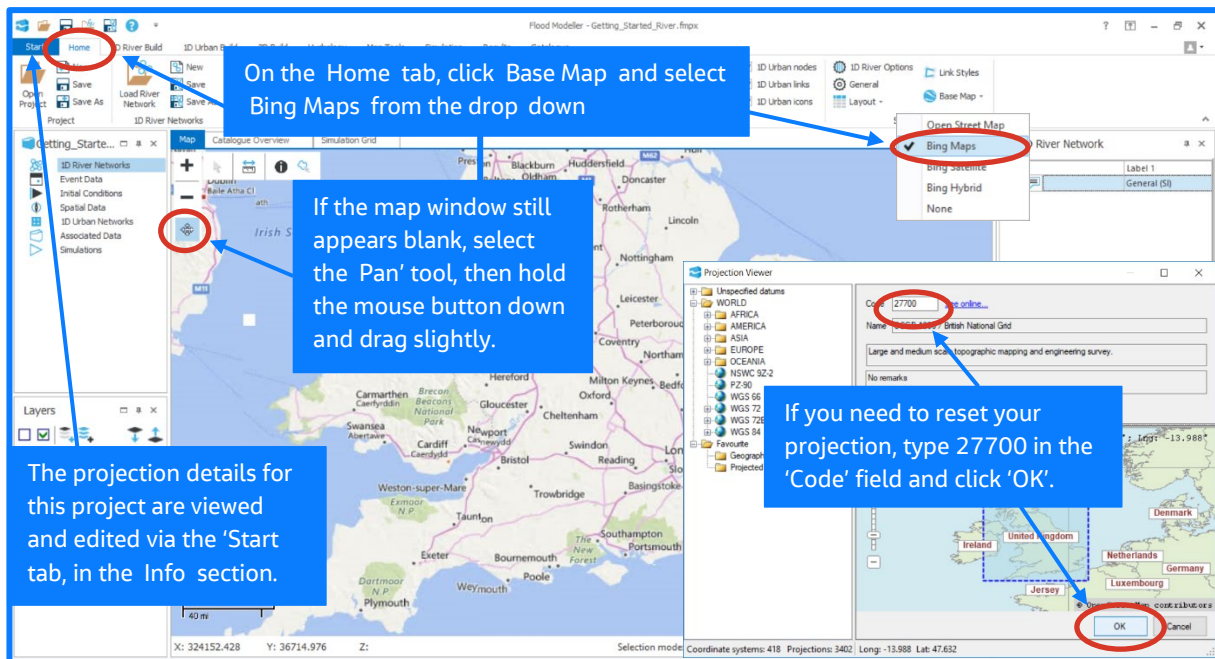

Tip: Save your project in the folder RiverModelling containing your network file. The results from your simulations will, by default, attempt to save in this folder. Projects are saved with extension .fmpx.

Note: If you are having issues with your basemap not displaying, the article [here](#) may help.

Step 3

Load the network River_Network.dat (in the RiverModelling folder). This represents part of the River Severn using a series of nodes. The nodes are shown in the map window, from 'Upton_19005' furthest upstream to 'Upton_00000' furthest downstream. Save the project again.

The network contains 'River Section' nodes providing the cross-sectional data and physical properties of the river, such as roughness of the channel. A 'Flow Time' boundary (QTBDY) specifies the flow entering the system upstream. Boundaries are also required at the end of a network; a 'Flow Head' boundary (QHBDY) is used in this case. The general rule is flow in and water level (e.g. head) out.

You may notice your map is on '1D River' selection mode; this is the default when Flood Modeller is opened. The selection mode can be switched between '1D Urban' and '1D River' through the right-click menu on the map view. For this tutorial, river selection mode is used throughout.

The screenshot shows the Flood Modeller software interface with several annotations in blue boxes and red circles:

- On the Home tab, click Load River Network' and browse to the file River_Network.dat**: Points to the 'Load River Network' button in the Home tab ribbon.
- The river network loads in several areas of the interface**: Points to the 'River Networks' section in the left-hand 'New' panel.
- Specify 1D network data**: A file explorer window showing the 'River_Network.dat' file selected in the 'GettingStartedData > RiverModelling' folder.
- Selection mode**: Points to the 'Selection mode' dropdown menu in the bottom right corner, which is currently set to '1D River'.
- Selection mode is 1D River**: Points to the '1D River' option in the selection mode dropdown menu.
- Once your network is loaded, save the project (not the network!)**: A general instruction box.
- Right click anywhere on the map to adjust selection mode as required.**: Points to the map area.

The map displays a river network with nodes labeled from 'Upton_19005' to 'Upton_00000'. The 'Layers' panel on the left shows 'River Networks' and 'Event Data'.

label	y	flow	stage	froude n
Upton_19005	y	0.000	0.000	0.000
18530	y	0.000	0.000	0.000
18142	y	0.000	0.000	0.000
17722	y	0.000	0.000	0.000

Step 4

The river network has loaded in several areas of the interface.

Alongside the river sections in the map window, you will also see the river network loaded into the 'Project' panel on the left of the screen. The 'Layers' panel is below the 'Project' panel; this will remain blank for now (and throughout this tutorial) as it is used for loading GIS datasets to the map view.

The network is also visible in the '1D River Network' panel on the right; the most upstream node is given in the top row of the network table, followed by the remaining nodes heading downstream. The default initial conditions table is shown in the '1D River Network' panel too, below the network table, but more on these later!

The river network appears in the 'Project' panel

We see the river network 'nodes' in the map view

The Layers panel (for GIS data) remains empty

The '1D River Network' table displays the nodes from upstream to downstream.

Initial conditions for the river network are shown.

Unit	Label 1	Label 2	Lat
QTBODY	Upton_19005		
RIVER	Upton_19005		
	Upton_14257		
	Upton_13657		

label	y	flow	stage	froude no	velocity
Upton_19005	y	0.000	0.000	0.000	0.000
Upton_18530	y	0.000	0.000	0.000	0.000
Upton_15046	y	0.000	0.000	0.000	0.000
Upton_15157	y	0.000	0.000	0.000	0.000
Upton_14652	y	0.000	0.000	0.000	0.000

Step 5

View the details of some of the nodes. Try plotting the flow entering the system at the flow-time boundary. Notice when the storm peaks and its duration.

Plot the cross-sectional view of some of the river sections to get a feel for the underlying topography.

The screenshot shows the Flood Modeller software interface. The top menu bar includes 'Start', 'Home', '1D River Build', '1D Urban Build', '2D Build', 'Hydrology', and 'Map Tools'. The '1D River Build' menu is open, showing options like 'New', 'Load River Network', 'Save', 'Save As', 'Load Urban Network', 'Save as', 'Add GIS Data', and 'New'. The 'Map' window shows a map of a river network with a red circle around a node. A blue callout box points to the 'Select' arrow icon and says: 'To view a node, click the 'Select' arrow icon and double click the node...'. Another blue callout box points to a node in the river network table and says: '... or double click the node in the river network table.' The 'RIVER SECTION: Upton_17720' window is open, showing 'Node Labels' and 'Lateral Inflow Labels'. A blue callout box points to the 'Plot...' button and says: 'Click 'Plot...' to visualise data from the node.' Another blue callout box points to the 'X' button and says: 'Clicking X closes the window showing the node details.' A third blue callout box points to the 'Plot...' button and says: 'In a QTBDY node, Plot... shows the flow entering the system at that boundary.'

label	y	flow	stage	froude no	vi
Upton_19005	y	0.000	0.000	0.000	0.
Upton_18530	y	0.000	0.000	0.000	0.
Upton_18142	y	0.000	0.000	0.000	0.
Upton_17720	y	0.000	0.000	0.000	0.
Upton_17128	y	0.000	0.000	0.000	0.
Upton_16584	y	0.000	0.000	0.000	0.
Upton_16082	y	0.000	0.000	0.000	0.
Upton_15646	y	0.000	0.000	0.000	0.
Upton_15157	y	0.000	0.000	0.000	0.
Upton_14652	y	0.000	0.000	0.000	0.
Upton_14257	y	0.000	0.000	0.000	0.

Tip: Select the 'Pan' tool (from the icons in the top left of the map window) to move around the map (hold mouse button down and drag). Icons are also given to provide the option to zoom in and out; alternatively, ensure your cursor is in the map window and use your mouse scroll wheel to zoom in and out!

Step 6

As we have a network together with upstream and downstream boundaries, all connected correctly, we simply require initial conditions to start a simulation.

Initial conditions tell the software the initial water level in the river. These are very important – an (unsteady) 1D simulation requires some water at every river section, at all times throughout the simulation. No part of your channel can ever “run dry” as the mathematical calculations in the 1D river solver will break down.

To calculate these initial conditions, we will run a “steady-state” simulation.

The upstream boundary shows a flow of 200 m³/s in the initial time interval.

Until initial conditions are imported into the river network, the table shows they are zero; there is no flow (or anything else!) initially.

Flow (m³/s)	Time (h)
200.000	0.000
200.000	1.000
210.000	1.300
240.000	1.780
300.000	2.440

Label	y	flow	stage	froude no	velocity	umode	ustate	z
Upton_19005	y	0.000	0.000	0.000	0.000	0.000	0.000	0.000
Upton_18530	y	0.000	0.000	0.000	0.000	0.000	0.000	0.000
Upton_18142	y	0.000	0.000	0.000	0.000	0.000	0.000	0.000
Upton_17720	y	0.000	0.000	0.000	0.000	0.000	0.000	0.000
Upton_17128	y	0.000	0.000	0.000	0.000	0.000	0.000	0.000
Upton_16384	y	0.000	0.000	0.000	0.000	0.000	0.000	0.000
Upton_16082	y	0.000	0.000	0.000	0.000	0.000	0.000	0.000
Upton_15646	y	0.000	0.000	0.000	0.000	0.000	0.000	0.000
Upton_15157	y	0.000	0.000	0.000	0.000	0.000	0.000	0.000
Upton_14652	y	0.000	0.000	0.000	0.000	0.000	0.000	0.000
Upton_14257	y	0.000	0.000	0.000	0.000	0.000	0.000	0.000
Upton_13463	y	0.000	0.000	0.000	0.000	0.000	0.000	0.000


Tip: From now on, we recommend selecting to 'Save As' a new network file if you make any changes.

Since Flood Modeller prompts you to choose a filename when creating a new file, do not be tempted to choose an existing one (since this will be overwritten) – always choose a new filename.

Step 7

Run a new steady (direct) simulation to calculate some initial conditions.

This will take the flow entering the system (through the QTBDY) in only a single timestep (time = 0hrs, i.e. the start of the analysis period). The software will calculate the water level at each node assuming this single timestep flow is "steady" throughout the simulation (does not change over time). These water levels can then be used as the initial conditions for an "unsteady" simulation (where the flow does change over time).

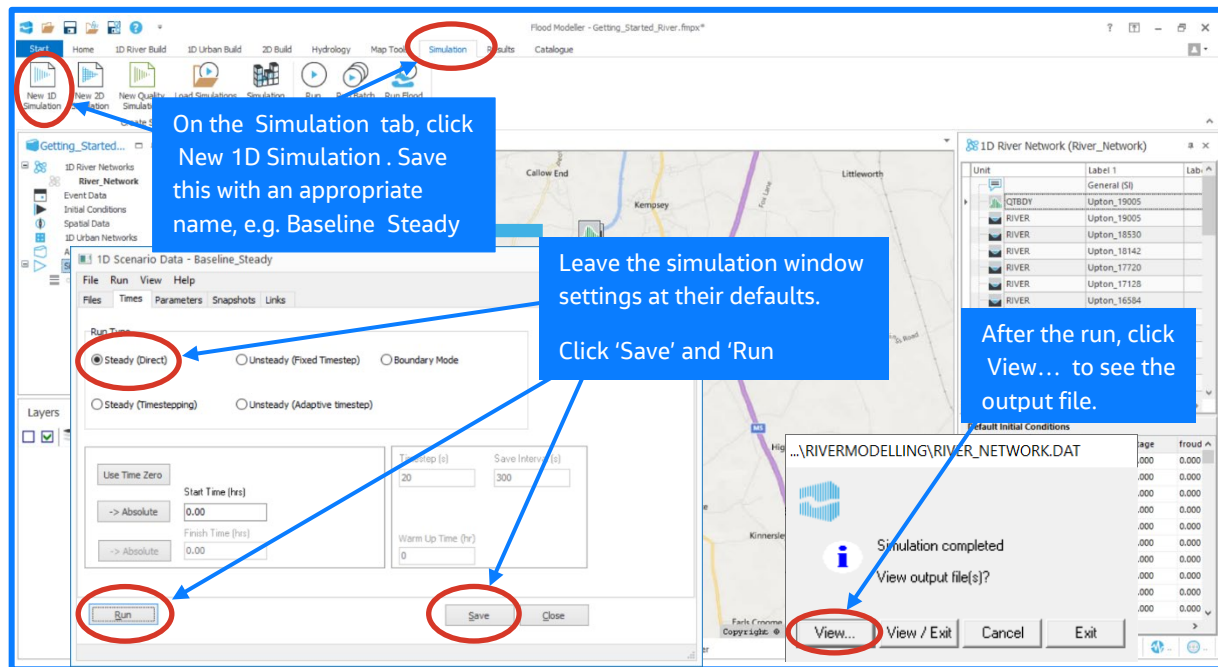

Tip: If your river network is active in Flood Modeller, it will automatically be selected as the river network file for use in any new 1D simulations. Initial conditions will also be taken from the network file (those seen in the table in the '1D River Network' panel). These selections can be seen on the 'Files' tab of the simulation window.

If you have multiple river networks loaded into the project panel, bold font indicates which is active. Double-click a river network to make it active.

Note: Once your simulation is complete, you can just close the window – the results are automatically saved in the same folder as your project. For river only simulations, these are contained in a pair of files with extension .zsl and .zsn.

Note: Alongside the 'Files' and 'Times' tabs, you may notice other tabs (visible via 'View>Tabs'). These can all be left with the default settings unchanged for the purposes of this guide.

Step 8

Let's look at the results from our steady-state simulation. Clicking 'View...' after the simulation finished showed the results file itself in a text editor e.g. Notepad.

View a 'Cross Section' plot of a node to visualise the water levels further.

The screenshot shows the Flood Modeller software interface. The 'Results' tab is selected in the top menu. The 'Cross Section' window is open, showing a list of available items (Upton_19005 to Upton_10583) and a 'Plot' button. The 'Plot' button is circled in red. The 'Cross Section' window also shows a list of variables (Stage, Water Depth, Maximum Stage, Minimum Stage, Total Energy, Initial Stage, Maximum Flow) and a 'Plot' button. The 'Plot' button is circled in red. The 'Cross Section' window also shows a list of variables (Stage, Water Depth, Maximum Stage, Minimum Stage, Total Energy, Initial Stage, Maximum Flow) and a 'Plot' button. The 'Plot' button is circled in red.

On the Results tab, click Cross Section

Your results will load in the Cross Section window. Select your node and variable(s), and click Plot...

The plot shows the water level (stage) at a cross sectional slice of the river.

Step 9

Now let's consider an unsteady simulation. Run a new unsteady (fixed timestep) 1D simulation for long enough to cover the inflow defined in the QTBDY.

This will simulate the flow entering the river from the 'Flow Time' boundary upstream (recall the data plotted from this boundary earlier) and calculate the water level (alongside other parameters) at all the nodes at each timestep.

Use a timestep of 2.5 seconds, a save interval of 300 seconds and the initial conditions from your steady simulation.

Larger timesteps are advantageous for faster simulation runtimes but could be too coarse to capture the detail necessary or could lead to large "jumps" in data calculated (which in turn can lead to instabilities and cause a simulation to crash). When running integrated simulations, it is also necessary to ensure timesteps of the various components are multiples of each other, but this is not something we need to consider for the purposes this guide.

On the Simulation tab, click New 1D Simulation. Name this (e.g. Baseline Unsteady)

In the 'Times' tab, select Run Type of Unsteady (Fixed Timestep) and enter a Finish Time of 48 hours. Enter a Timestep of 2.5 and Save Interval of 300 (seconds).

In the Files tab, select to use an Initial Conditions File (zss/iic)

Browse to your steady state results and click 'Open'

Finally, click Save and Run to run the simulation.


Tip: If you find your simulation is slow to run, try using a larger timestep and/or save interval.

Step 10

Look at some of the results from your unsteady simulation.

Animate a 'Long Section' plot to see the water levels changing along the entire network.

'Time Series' plots are also available for your 1D river results, with options provided to plot flow, stage, velocity and water depth, alongside other outputs.

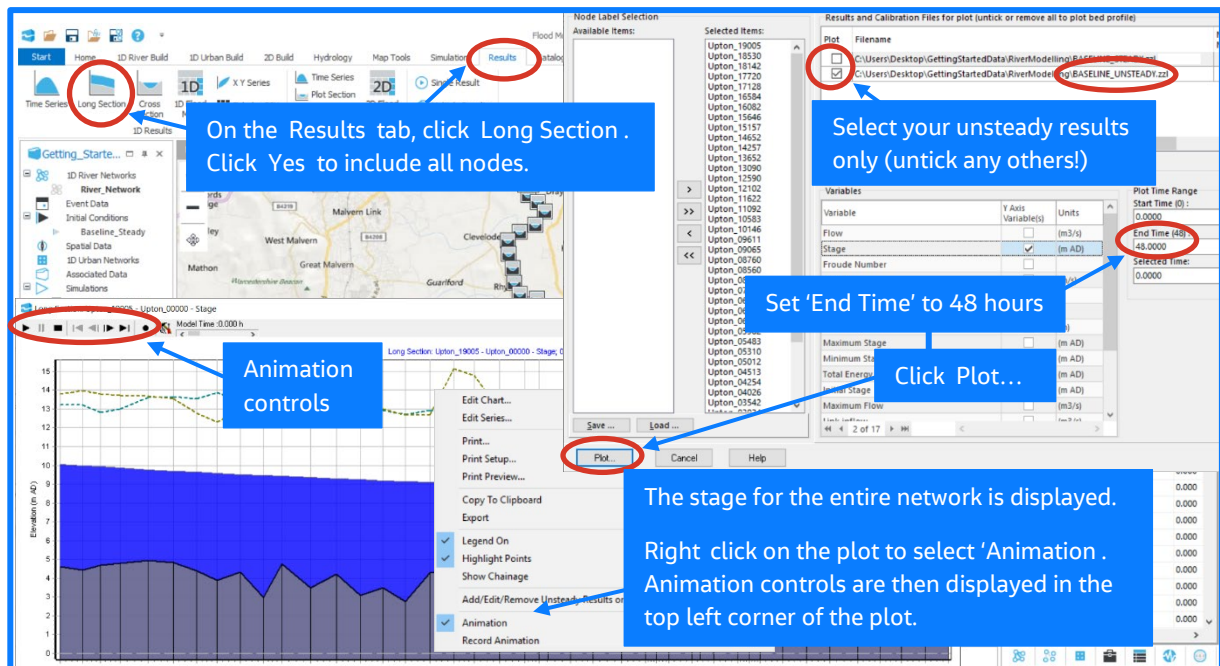

Summary

You have now had an initial introduction to 1D river modelling.

We loaded a river network into Flood Modeller and noticed how it starts and ends with boundary units. In our particular river network, a 'Flow Time' boundary detailed the flow entering the system furthest upstream. We noticed that boundaries are connected to the network by sharing the same node label as the nearest 'River Section' node. We viewed this boundary and plotted the flow from this. Flood Modeller also provides a variety of other boundary units.

Instead of loading a pre-existing river network, we may be in a situation where we are building the river network, for example by using options provided in Flood Modeller to import cross-sectional data for the river sections. In this case, it would still be required that the river network starts and ends with a boundary unit. We saw that we can confirm this is the case by checking they are the very first and very last rows in our network table.

Tip: When adding new units to a network, first highlight the node (or row in network table) immediately upstream of the new node location. This ensures that the new node is added into the right part of the network.

We explored the river network in more detail and viewed some of the river sections in plots. Alongside 'River Section' nodes, Flood Modeller provides a vast selection of 1D units to represent features and structures, such as bridges, culverts, and weirs.

We ran a steady-state simulation to calculate initial conditions as 1D simulations always require water initially in the system. Low flows can often be a source of instability in 1D modelling. We then setup and ran an unsteady 1D simulation using these initial conditions. We chose a timestep of 2.5 seconds and noticed that a larger timestep would decrease simulation time. We must always ensure the timestep is small enough to capture the data required. Too coarse a timestep can also lead to instability issues.

Finally, we visualised the results from our 1D simulation. We animated the stage data calculated, showing times when the water level exceeded the bank height. We noticed options were provided to plot flow, stage, velocity and water depth, alongside other outputs.

We saw the water level exceeded the bank height in some locations and was lost from the system for our simulation. To explore where this water goes, one option would be to integrate our 1D river network with other modelling components, connecting to a 1D urban network and/or 2D domains. This is covered in the guide ['Getting Started – Integrated Modelling'](#).

What's next?

If you would like to find out more about the 1D river solver, check out our [YouTube channel](#), [user manual](#) or get in touch with our support team.

You also may be interested in the other ['Getting Started' guides](#) in this series.